

# EX182 HIGH BACK FABRIC CHAIR

## OPERATING INSTRUCTIONS



### FEATURE

#### • HEIGHT ADJUSTMENT

To raise seat remove pressure from seat and lift lever (1). To lower seat height sit on chair and lift lever(1).

#### • LOCKING TILT ADJUSTMENT

For individual comfort, this chair has been equipped with an adjustment that will allow the user to change the tension of the tilting feature. Turn knob (2) clockwise to increase tension and counter-clockwise to decrease or ease the tension. To lock return chair to the upright position and push lever (1) in. To unlock pull lever (1) out.

**NOTE:** Be careful not to loosen back tilt adjustment knob completely.

### WARNING

1. Use this product only one person at a time.
2. Do not use this chair unless all bolts screws and knobs are securely tightened.
3. Check that all bolts screws and knobs are tight every six months or as needed.
4. Do not overturn back tilt knob when decreasing tension.
5. Dispose of packing material properly. Do not use plastic cover as head covering. It may cause suffocation.
6. Do not use chair as a stepladder.
7. Use this chair for its intended purpose only.
8. Use mild detergent only for cleaning.

### Warranty

5 Year limited warranty on all non moving metal parts. Seat plate, pneumatic cylinder, wood, plastic parts, base and casters for 2 years. Upholstery fabric against wear and deterioration for 1 year.

*All warranties are limited to the original purchaser for normal commercial usage defined as a standard forty hour work week by persons weighing 250 lbs. or less.*

Our Quality standards are among the highest in the industry. Sometimes, no matter how hard we try, there are times when parts are damaged or missing. Our customer Service Department will do everything possible to promptly remedy the problem. **TOLL FREE PARTS NUMBER 1-800-950-7262** Monday through Friday 8:00 a.m. - 5:00 p.m. pacific time.




**OFFICE STAR™**  
**PRODUCTS**

P.O. Box 3520 • Ontario, CA 91761 • [www.officestar.net](http://www.officestar.net) • [parts@officestar.net](mailto:parts@officestar.net)

# EX182 HIGH BACK FABRIC CHAIR

## ASSEMBLY INSTRUCTIONS

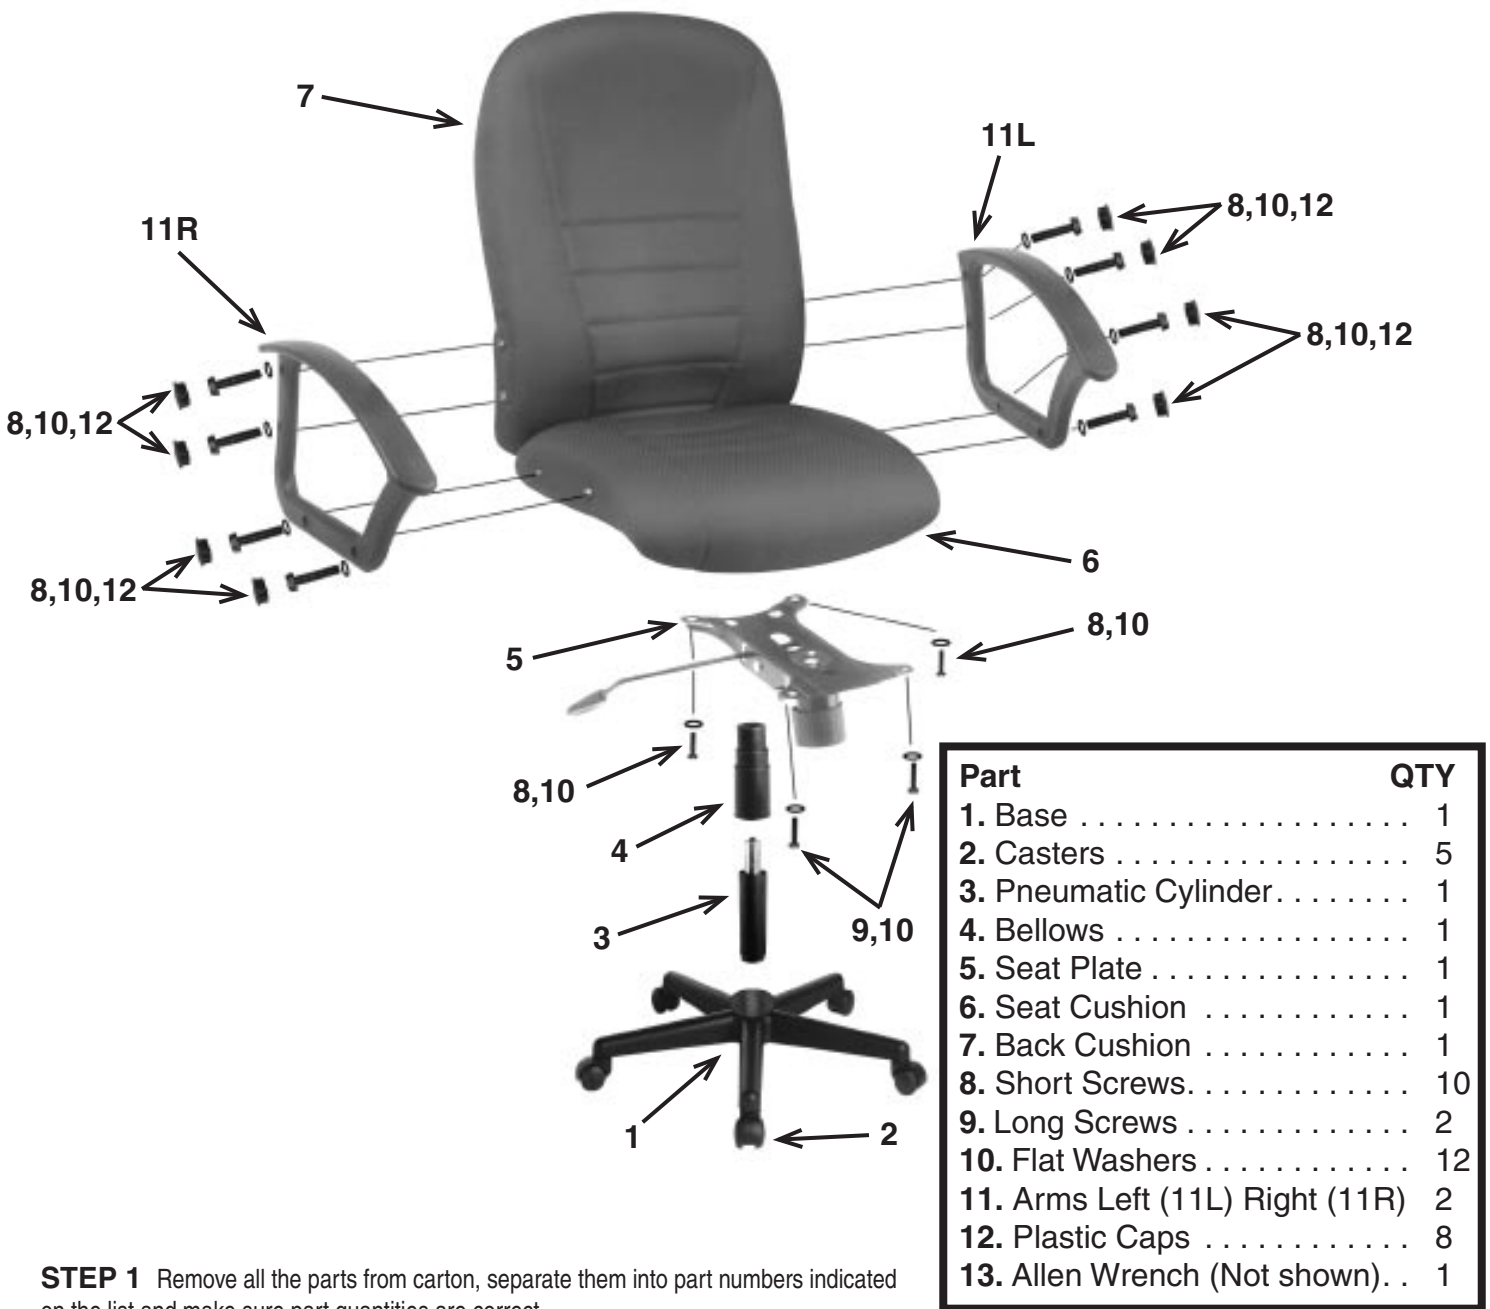

**STEP 1** Remove all the parts from carton, separate them into part numbers indicated on the list and make sure part quantities are correct.

**STEP 2** Insert five Casters (2) into Base (1). Insert Pneumatic Cylinder (3) into Base (1) and slip Bellows (4) over cylinder shaft.

**STEP 3** Attach adjustable Seat Plate (5) to Seat Cushion (6) with the arrow towards the front of the chair using two Long Screws (9) and two Flat Washers (10). Use two Short Screws (8) and two Flat Washers (10) at the rear of the Seat Cushion (6). **Tighten all four screws completely.**

**STEP 4** Align the holes in the Arms (11L and 11R) with the holes in the Seat Cushion (6), insert two Short Screws (8) and two Flat Washers (10), using another two Short Screws (8) and two Flat Washers (10) to attach Arms (11L and 11R) to the side of Back Cushion (6). **FULLY TIGHTEN ALL SCREWS.**

**STEP 5** Cover the screws on the arms with black plastic caps (12).

**STEP 6** Place the assembled seat on top of Pneumatic Cylinder (3) and apply pressure.

**ATTENTION: MAKE SURE ALL SCREWS ARE FULLY TIGHTENED BEFORE USING CHAIR.**